


### 1. Front Body (Front Body, installation on the outside of the door)

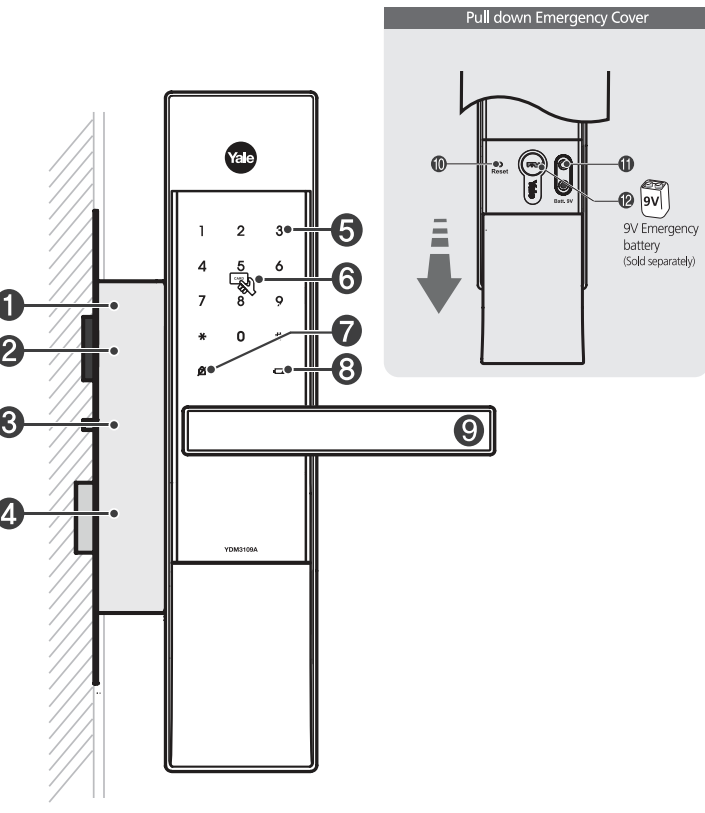

### 2. Basic Contents

**Basic Contents**

- Front Body
- Main Body
- Lock Case

**Optional Accessories**


- Remote Controller
- Remote Control Module
- Z-wave module
- Zigbee module
- Bluetooth module

### 3. Specifications

Parts	Specifications	Remarks
Front Body	68.6(W) X 306.6(H) X 27(D)(70.6)mm	Operating temperature -15~55° C (5~131° F)
Main Body	72.8(W) X 306.6(H) X 37(D)(80.8)mm	
Lever	Zinc die-casting	
Card Key	4ea	Up to 100 keys
Battery	4ea 1.5 VV alkaline batteries (Operating Voltage: 4.5 ~ 6V)	Last up to 1year (10times used a day)
Lock case	Steel and SUS430	
Option	Remote Control	Optional
	Z-wave	
	Zigbee	
	BLE module	

\* Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of the batteries.

### 4. Main Body (Main Body, installation on the inside of the door)

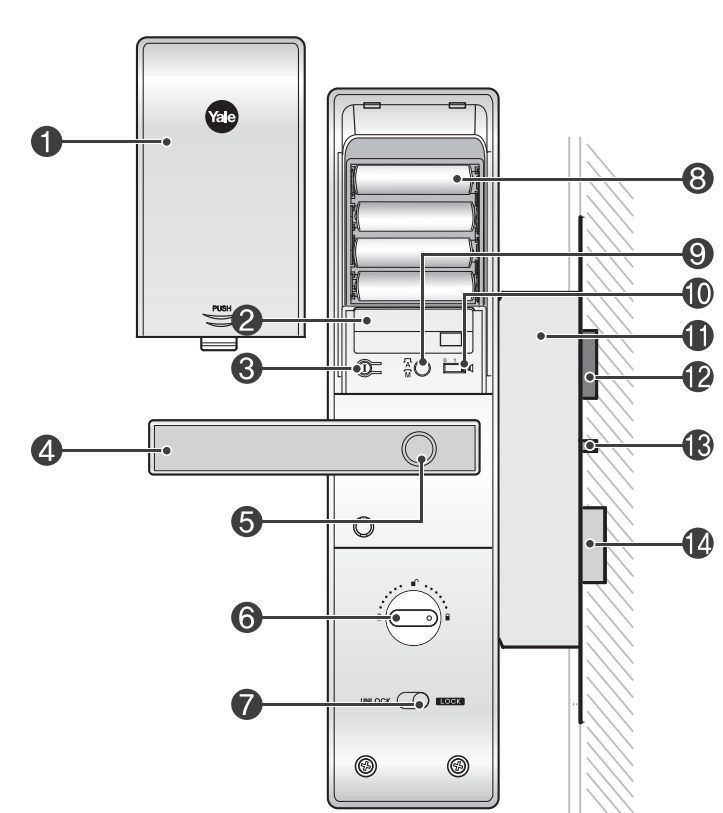

### 5. Front Body

1 Lock case	2 Latch Bolt
3 Automatic Locking Sensor	4 Dead Bolt
5 Keypad(10-Key)	6 Card Key Reader
7 Dead Bolt Jam Lamp	8 Battery Change Lamp
9 Lever	10 Reset Button
11 Emergency Power Supply Terminal	
12 Emergency key	

### 6. Main Body

1 Battery Cover	2 Slot for Remote control / Bluetooth module
3 ① Registration button	4 Lever
5 Safe Handle Button	6 Manual Thumb Turn
7 Internal Forced Lock Switch	8 Batteries
9 Auto/Manual Lock Button	10 Volume Control Switch
11 Lock Case	12 Latch Bolt
13 Automatic Locking Sensor	14 Dead Bolt

### 7. Setting Menu

**Normal Mode:** Without a designated person, anyone who knows 'User PIN Code' has authority to set features.  
**Master Code:** Only a designated person who knows 'Master PIN Code' has authority to set features.  
**Visitor Code:** The visitor code is different from user code and given out to visitors only.  
**Onetime Code:** The onetime code is used only once for unlocking the door lock and automatically deleted after usage.  
**User Slot Number:** It should be 2 digits(like '01', '02'...'99', '00') and available in advanced mode.

	Touch the Keypad of the Front Body with your palm to begin
	Press * button on the Keypad
	Press # button on the Keypad
	Press ① (Registration) button in every steps to start or complete the session
	Enter User Card Key (Up to 100EA)
	Enter User Code (4 ~ 10 digits)
	Enter Master Code (4 ~ 10 digits)
	Enter Visitor Code (Only 4 digits)
	Enter Onetime Code (Only 4 digits)
	User Slot Number should be 2 digits (like '01' ... '99' and '00'. Location of 100th user slot must be assigned '00' instead of '100'. )
	Rotation area to add more features

### 8. Product Features

**3minute Lock Out Feature**  
 After five(5) unsuccessful attempts at entering an invalid code or card key, 3 minute Lock out mode will be activated.

**Fake PIN Code**  
 Users can hide their pin code by either entering a series of digits at the beginning or after their pin code. Thus, the pin code is not exposed.

**Smart pad**  
 Convenient function that shows the operation of the door lock with 12 numbers and symbols on the number plate. It expresses various situations such as door opening, closing, and typing on a number plate.

**Mechanical Key**  
 When there is a problem such as forgotten security code electronic malfunction, the lock can be operated with mechanical key. You can lock and open the door by opening the case lid and turning the key.

**Safe handle**  
 There is a safety button embedded on the handle and user must press the button together with the handle to open the door. The safety button prevents break-in attempt by drilling holes on the door, inserting string loops from outside and pulling the handle to open the lock.

**Smart Etiquette**  
 To enter pin codes on the keypad and open the door lock in silent mode.

**Bluetooth**  
 User can use various bluetooth functions using Yale access module after pairing & registering a smart phone with door lock installed to the Yale access app.

**Network Module Setting (\*Optional)**  
 This setting becomes available through the Main Menu (9) and allows the lock to connect with the Controllers.

### 9. Quick Menu (Normal Mode)


Normal mode is a convenient mode for anyone to set the digital door lock. User can set password like user code, visitor code, onetime code and register card keys as well. Factory default is a normal mode.

1	2	3	4	5	6	7	8	9	10	11	12	
12 (Registration process) * Continue / ① Complete												
<b>User Code</b>												
Registr-ation	①	U	①									①
<b>Card Key</b> Up to 100EA												
Registr-ation	①	CARD	①									①
<b>Visitor Code</b>												
Registr-ation	U	①	1	#	1	#	V	#	*	OR	①	
Delete	U	①	3	#	U	#	*	OR	①			
<b>Onetime Code</b> Automatically deleted after use												
Registr-ation	U	①	2	#	1	#	O	#	*	OR	①	
Delete	U	①	3	#	U	#	*	OR	①			
<b>Delete all credentials (Card)</b>												
Delete all card	U	①	3	#	U	#	*	OR	①			


Controller											
Registr-ation	U	①	9	#	1	#	Cont roller	#	*	OR	①
Delete	U	①	3	#	U	#	*	OR	①		

**How to press remote control set button**  
 : Press the set(registration) button located on the front of remote control. You can press it using a pin like the picture.

### 10. Unlocking Door with Code

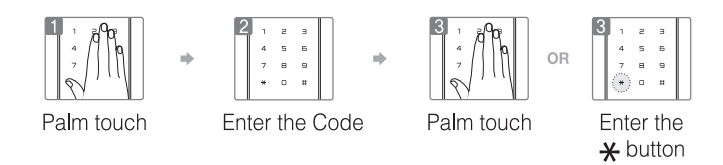

### 11. Unlocking Door with Card Key

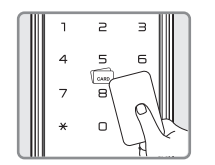

Contact registered Card Key

### 12. Safe Handle Feature

**To disable Safe Handle Setting**

- Open the battery cover and take out a hex wrench.
- Keep pushing the safe handle button.
- Turn the fixing screw clockwise to fix the button.

**To enable Safe Handle Setting**

- Open the battery cover and take out a hex wrench.
- Turn the fixing screw anticlockwise until the safe handle button comes out.


### 13. Opening Door(Inside/Outside)

**From Outside**  
 Press the lever handle down to open door

**From Inside**  
 To open when Safe Handle Settings are enabled :  
 Keep pushing the safe handle button. And then, Press the handle down to open the door.  
 To open when Safe Handle Settings are disabled :  
 Press the lever handle down and open the door.

**Internal Forced Lock**  
 Close the door and then move the lock button to "LOCK" position.

### 14. Unlocking Door with Smart Etiquette

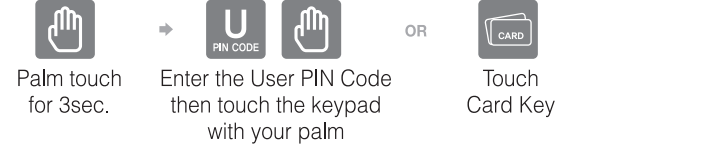

### 15. Locking the Door(Inside/Outside)

**Automatic Lock Mode(Inside/Outside)**  
**5 SEC** In automatic lock mode, the lock automatically locked within 5 seconds after closing the door and detecting the automatic lock sensor.

**Manual Lock Mode**

- The door locks when touching the keypad with the palm. (outside)
- Use Thumb turn knob on the main body. (Inside)

