


Dry Contact Transmitter (TVTXL916A04C) - Concertina

Dry Contact Transmitter

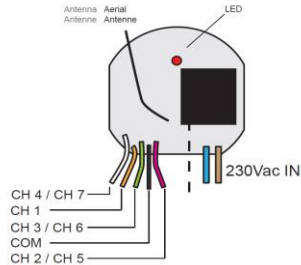

Switching Transmitter to Mode 2

1. Wire all 4 channel wires together with the black com (Common)
2. Provide 230v ac to activate the device
3. Fast Flashing LED indicates Mode one. Slow flashing indicates Mode 2. We want mode 2

Pairing with the Concertina louvre – Via Remote

1. Only CH5, CH 6, CH 7 and Com are used.
 - CH5 Purple
 - CH6 Green
 - CH7 White
 - Com Black
2. Press P3 in the back of the Louvre remote – The concertina will make a tone
3. Press the up button on the remote and the tone will pause
4. On the transmitter touch the Purple and black together and the tone will go intermittent – Pairing is complete

Controls

- CH5 Purple - Open
- CH6 Green - Stop
- CH7 White - Close
- Com Black - Common

Pairing with the Concertina louvre – Via Concertina Controller

1. In the Concertina Controller, press the P1 button and keep it pressed. The controller will make a tone.
2. On the TVTXL, touch the Purple and Black wires together. The tone in the controller should go intermittent, indicating pairing is complete.