
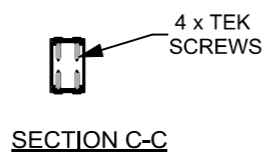


X-X CROSS SECTION X-X



Y-Y CROSS SECTION Y-Y

CONNECT 2 JOISTS OR BEARERS END TO END USING 2 STRAIGHT CONNECTORS
FIX BRACKET EXTERNALLY USING 4 x TEK SCREWS

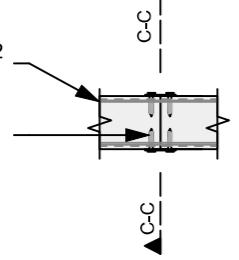


D4 OPTION A PROFRAME JOIST & BEARER CONNECTIONS

CONNECT 2 JOISTS OR BEARERS END TO END USING 2 STRAIGHT CONNECTORS
TENSION FIT BRACKET INTO JOIST OR BEARER
ALL BUTT JOIN CONNECTIONS MUST BE SUPPORTED WITHIN 200mm OF THE JOIN

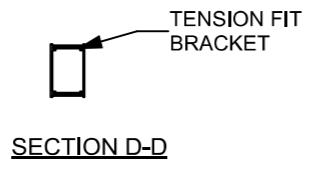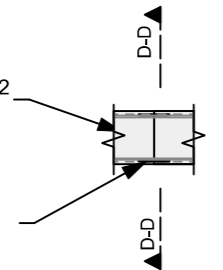


D4 OPTION B PROFRAME JOIST & BEARER CONNECTIONS

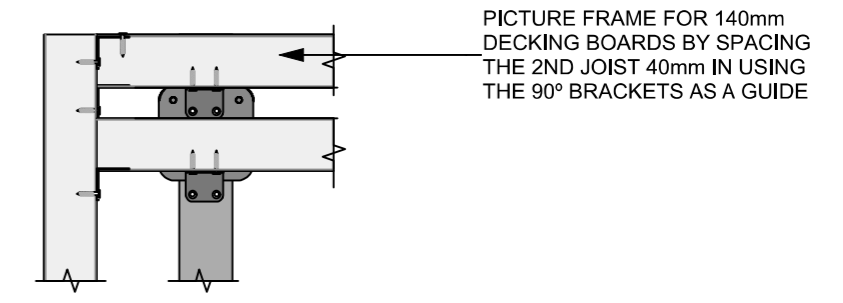

D3 PROFRAME JOIST SPACING FOR DECKING BOARDS

USE PROJACK DIRECTLY UNDER THE JOIST OR BEARER TO CORRECT THE FALL IN THE SUBSTRATE FOR HEIGHTS 5mm - 13mm USE A SINGLE BASE AND WEDGE
FOR HEIGHTS 15mm AND ABOVE USE A BASE PACKER, TOP AND WEDGE.
CHANGE THE WEDGE POSITION FOR HEIGHT ADJUSTMENT

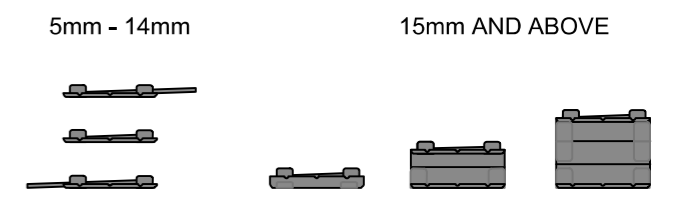

D5 PROJACK STACKER HEIGHTS