



Juralco ClosetPro Melamine Wardrobe System - Installation Instructions



Installation. Use level to attach full length Closet Hanging Track.
Ensure Track, screw attached firmly into studs.

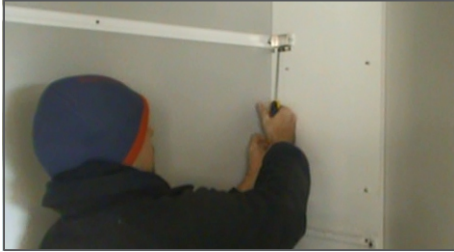

Attach first Vertical panel.
Tighten vertical then horizontal screws on Suspension bracket.

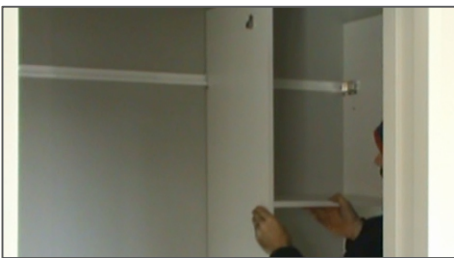

Working from one end...
Clip on second vertical panel.
Then insert Shelves or Rail between these two panels.
Square up second panel, then secure suspension bracket in place.
Then lock shelves (if any) between the first two panels.

Repeat, working along until last panel installed and secured.



Cut Top panel to length.
Edge band ends if edge is visible to the customer.

Place Top panel in correct position,(on top of all vertical panels)
Starting at one end, use Countersink+drill to drill down into Vertical panels.
Screw attach at every panel, screw head flush.

Finally install all shelves, Closet Rails and Drawers.
Final clean up, clean all surfaces.

Job finished.

