
## **RESIDENTIAL RIBLINE® WALL VERTICAL ON CAVITY** SILL FLASHING FOR VERTICAL CLADDING ON CAVITY (RECESSED WINDOW/DOOR) OPTION 2

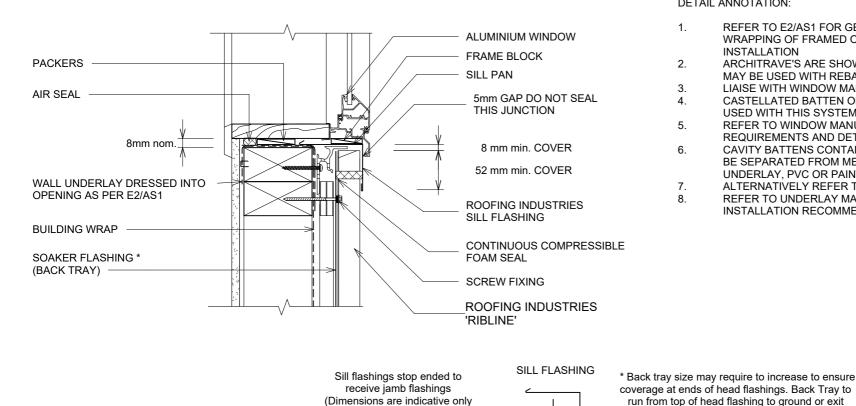

## Detail Number: RI-RRWVC-140C Date drawn: 25/07/2024

Scale: 1:5@ A4

## DETAIL ANNOTATION:

point. \* (Dimensions are indicative only) \* Turn down end of head flashing

- 1 REFER TO E2/AS1 FOR GENERAL WINDOW OPENING FOR WRAPPING OF FRAMED OPENING PRIOR TO WINDOW INSTALLATION
- 2. ARCHITRAVE'S ARE SHOWN FOR CONSISTENCY ONLY, DETAIL MAY BE USED WITH REBATED LINER
- LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION 3
- CASTELLATED BATTEN OR APPROVED DRAINED BATTEN CAN BE 4. USED WITH THIS SYSTEM
- REFER TO WINDOW MANUFACTURER REGARDING SUPPORT BARS 5 REQUIREMENTS AND DETAILS ETC
- 6. CAVITY BATTENS CONTAINING CORROSIVE TREATMENTS MUST BE SEPARATED FROM METAL CLADDING BY DPC, WALL UNDERLAY, PVC OR PAINTING
- 7. ALTERNATIVELY REFER TO E2/AS1
- REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR 8. INSTALLATION RECOMMENDATIONS



Copyright detail (C)2024



## GENERAL NOTES

- These details are to be read with Roofing Industries Ribline Product Technical Statement.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.

& show minimum lap covers)

BACK TRAY

- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixings: The designer needs to check the screw manufacturer's technical data of the selected screw type for the design wind load and the material being fastened to.