

SMARTLOCK BALUSTRADE SYSTEM BASE FIX DESIGN TABLES

Base Fix SL120B - Safety From Falling Barriers:

LAMINATED SENTRY toughened laminated safety glass, and TOUGHENED monolithic toughened safety glass.

BASE FIXED TO TIMBER

Glass Thickness	Occupancy	Maximum	Channel Fixing	Design loads to d	leck structure	Maximum desig	n wind pressure
t (mm)		Design Height H (mm)	Spacing (mm) Max	M* (kNm/m)	T* (kN)	SLS Wind (kPa)	ULS Wind (kPa)
12, 15,	Α	1100	200	1.08	6.34	-	-
13.52, 17.52	A(other), C3, B, E	1100	200	1.24	7.84	1.37	2.05

CONCRETE & STEEL SUBSTRATES ONLY:

	А	1100	400	1.08	12.34	-	-
12, 15,		1000	400	1.13	14.40	1.51	2.25
13.52, 17.52	A(other), C3, B, E	1100	400	1.24	15.69	1.37	2.05
		1150	400	1.29	16.33	1.31	1.96
13.52, 15, 17.52	A(other), C3, B, E	1200	200	1.35	8.49	1.26	1.88
15, 17.52	A(other), C3, B, E	1300	200	1.46	9.13	1.16	1.73
15, 17.52	A(other), C3, B, E	1400	200	1.58	9.77	1.08	1.61
17.52, 21.52	A(other), C3, B, E	1500	200	1.69	10.41	1.01	1.50
21.52	C1, C2, D	1250	200	2.81	17.61	2.41	3.60

T* is tension force per fastener
 (@ 200 or 400mm centres)

Base Fix SL120B - Pool Fence (not protecting a fall > 1m):

Concrete, steel & timber only

Glass Thickness	NZS 3604	Substrate	Maximum	Channel Fixing	Design loads to deck structure	
t (mm)	t (mm) Wind Zone Substr		Design Height H (mm) Sp		M* (kNm/m)	T* (kN)
12 Up to High		Timber	1220	200	0.83	5.17
12	op to riigii	Concrete & Steel	1220	400	0.83	10.33
15	Up to Very High	Concrete & Steel	1220	200	1.07	6.70
17.52	Up to Extra High	Concrete & Steel	1220	200	1.29	8.09

Glass thickness key: Note: Inner layer refers to balcony / walking surface side

Glass Thickness	Inner layer glass	Interlayer thickness	Outer layer glass	Panel size requirements		
t (mm)	thickness (mm)	(mm) and type	thickness (mm)	Minimum panel width (mm)	Maximum panel width (mm)	
12	-	-	-	1000	1700/1900 (see below)	
15	-	-	-	1000	N/A - Pool Fence only	
13.52	6	1.52 SENTRYGLAS	6	1200	Refer manufacturing limits	
17.52	8	1.52 SENTRYGLAS	8	1000	Refer manufacturing limits	
21.52	10	1.52 SENTRYGLAS	10	1000	Refer manufacturing limits	

Maximum panel widths for Interlinking Rail/Bracket systems:

Applies where barrier is protecting a fall of 1.0m or more

Interlinking Rail	Maximum panel	Position
System	width (mm)	
S25	1700	on glass only
S40	1700/1900	HB50 bracket / on glass
AH4036	1700/1900	HB50 bracket / on glass

Post failure requirements:

Applies where barrier is protecting a fall of 1.0m or more

TOUGHENED	Interlinking rail required in all cases		
LAMINATED STF	No interlinking rail required		
	Minimum panel widths apply		

- 1) Design table only valid for use with Smart Lock SL120B balustrade system.
- 2) Refer to elevation drawings for Height 'H'.
- 3) The specifier must ensure the balustrade height above floor level requirements as per the NZ Building Code are complied with.
- 4) Design loads are in accordance with AS/NZS 1170.1:2002 table 3.3 as modified by NZBC B1/VM1 and DBH Guidance on Barrier Design (March 2012).
- 5) M* & T* denote bending moment (kNm/m width) and tension loads (kN/connection) respectively to be supported by the deck/pool structure.
- 6) T* is based on wet SG8 timber substructures (except for occupancy A).
- 7) Capacity of all substructure is to be verified by building engineer or checked for accordance with NZS3604 (where applicable) prior to fixing.
- 8) All glass is to be toughened safety, in either TOUGHENED Monolithic or LAMINATED SENTRY variants subject to requirements of the tables above. Minimum glass residual strength 100MPa, all edges polished.
- 9) Glass & interlayer thicknesses shown are nominal thickness. Table is based on glass minimum tolerance as per NZS 4223.1:2008.
- 10) Refer to the relevant fixing details on drawings SL120B/C/RA-M10, SL120B/C/RA-M12, SL120B/S/BN, SL120B/T-SJ/CS, SL120B/T-TJ/CS.
- 11) The tables for this balustrade system are based on an SLS deflection limit of 50mm. While greater than the suggested limit of height/60 as specified in NZS1170.0 for post and rail handrail systems, this is deemed acceptable based on the nature of the cantilevered glass system.
- 12) For designs outside the scope of these tables and ULS wind pressures exceeding those shown, specific design is required.
- 13) Maximum 10mm tolerance allowed to H heights noted in table.



SMARTLOCK BALUSTRADE SYSTEM SIDE FIX DESIGN TABLES

Side Fix SL120S - Safety From Falling Barriers:

Concrete, steel & timber substrates only. LAMINATED SENTRY toughened laminated safety glass, and TOUGHENED monolithic toughened safety glass.

Glass Thickness	Occupancy	Maximum	Channel Fixing	Design loads to o	deck structure	Maximum desig	n wind pressure
t (mm)		Design Height H (mm)	Spacing (mm) Max	M* (kNm/m)	T* (kN)	SLS Wind (kPa)	ULS Wind (kPa)
12, 13.52, 15, 17.52	Α	1100	400	0.99	7.92	-	-
12	A(other), C3, B, E	1050 (Concrete & Steel)	400	1.41	11.25	1.38	2.05
12	A(other), C3, B, E	1050 (Timber)	200	1.41	5.625	1.38	2.05
13.52, 15, 17.52	.52 A(other), C3, B, E	1100 (Concrete & Steel)	400	1.46	11.7	1.32	1.97
13.32, 13, 17.32	A(other), C3, B, E	1050 (Timber)	200	1.41	5.625	1.38	2.05
15, 17.52	A(other), C3, B, E	1200 (Concrete & Steel)	400	1.49	11.88	1.14	1.70
13, 17.32	A(other), C3, B, E	1300 (Concrete & Steel)	200	1.60	6.39	1.06	1.58
17.52, 21.52	A(other), C3, B, E	1400 (Concrete & Steel)	200	1.71	6.84	0.99	1.48
21.52	C1, C2, D	1115 (Concrete & Steel)	200	2.78	11.12	2.44	3.64

T* is tension force per fastener (@ 200 or 400mm centres)

Side Fix SL120S - Pool Fence (not protecting a fall > 1m):

Concrete, steel & timber only

Glass Thickness	NZS 3604	Substrate	Maximum	Channel Fixing	Design loads to de	eck structure
t (mm)	Wind Zone	Substrate	Design Height H (mm)	Spacing (mm) Max	M* (kNm/m)	T* (kN)
12	Up to High	Concrete, Steel & Timber	1220	400	1.00	7.32
15	Up to Very High	Concrete, Steel & Timber	1220	200	1.29	4.75
17.52	Up to Extra High	Concrete & Steel	1220	200	1.56	5.74

Glass thickness key: Note: Inner layer refers to balcony / walking surface side

Glass Thickness	Inner layer glass	Interlayer thickness	Outer layer glass	Panel size requirements	
t (mm)	thickness (mm)	(mm) and type	thickness (mm)	Minimum panel width (mm)	Maximum panel width (mm)
12	-	-	-	1000	1700/1900 (see below)
15	-	-	-	1000	N/A - Pool Fence only
13.52	6	1.52 SENTRYGLAS	6	1200	Refer manufacturing limits
17.52	8	1.52 SENTRYGLAS	8	1000	Refer manufacturing limits
21.52	10	1.52 SENTRYGLAS	10	1000	Refer manufacturing limits

Maximum panel widths for Interlinking Rail/Bracket systems:

Applies where barrier is protecting a fall of 1.0m or more

Applied where burner to protecting a run or 1.0m or more					
Interlinking Rail	Maximum panel	Position			
System	width (mm)				
S25	1700	on glass only			
S40	1700/1900	HB50 bracket / on glass			
AH4036	1700/1900	HB50 bracket / on glass			

Post failure requirements:

Applies where barrier is protecting a fall of 1.0m or more

TOUGHENED	Interlinking rail required in all cases	
LAMINATED STF	No interlinking rail required	
	Minimum panel widths apply	

- 1) Design table only valid for use with Smart Lock SL120S balustrade system.
- 2) Refer to elevation drawings for Height 'H'.
- 3) The specifier must ensure the balustrade height above floor level requirements as per the NZ Building Code are complied with.
- 4) Design loads are in accordance with AS/NZS 1170.1:2002 table 3.3 as modified by NZBC B1/VM1 and DBH Guidance on Barrier Design (March 2012).
- 5) M* & T* denote bending moment (kNm/m width) and tension loads (kN/connection) respectively to be supported by the deck/pool structure.
- 6) T* is based on wet SG8 timber substructures (except for occupancy A).
- 7) Capacity of all substructure is to be verified by building engineer or checked for accordance with NZS3604 (where applicable) prior to fixing.
- 8) All glass is to be toughened safety, in either TOUGHENED Monolithic or LAMINATED SENTRY variants subject to requirements of the tables above. Minimum glass residual strength 100MPa, all edges polished.
- 9) Glass & interlayer thicknesses shown are nominal thickness. Table is based on glass minimum tolerance as per NZS 4223.1:2008
- 10) Refer to the relevant fixing details on drawings SL120S/C/RA-M10, SL120S/C/RA-M12, SL120S/S/BN, SL120S/T/BN, SL120S/T/LS.
- 11) The tables for this balustrade system are based on an SLS deflection limit of 50mm. While greater than the suggested limit of height/60 as specified in NZS1170.0 for post and rail handrail systems, this is deemed acceptable based on the nature of the cantilevered glass system.
- 12) For designs outside the scope of these tables and ULS wind pressures exceeding those shown, specific design is required.
- 13) Maximum 10mm tolerance allowed to H heights noted in table.




SMARTLOCK BALUSTRADE SYSTEM CONCRETE FIXING DETAIL: SL120B/C/RA-M10

FIXING TYPE: SL120B WITH M10 ROD ANCHOR OCCUPANCY: A, B, E, C3

NOT SUITABLE FOR OCCUPANCY C1/C2, D OR C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. H' refers to top of barrier.

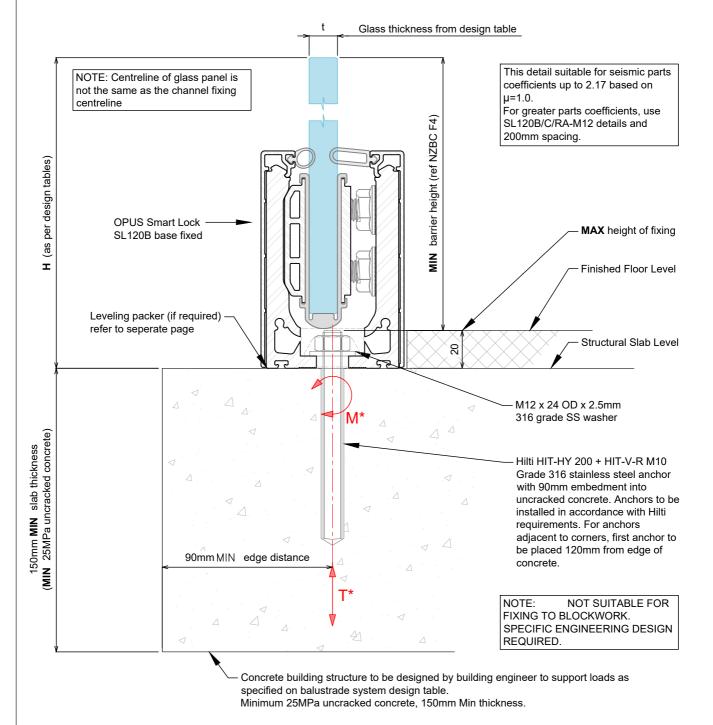

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) No substitution allowed any variation from the details above and design tables will require specific design.
- 4) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM CONCRETE FIXING DETAIL: SL120B/C/RA-M12

FIXING TYPE: SL120B WITH M12 ROD ANCHOR OCCUPANCY: A, B, E, C3, C1/C2, D

NOT SUITABLE FOR OCCUPANCY C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. interlinking rail / clips not shown for clarity. H' refers to top of barrier.

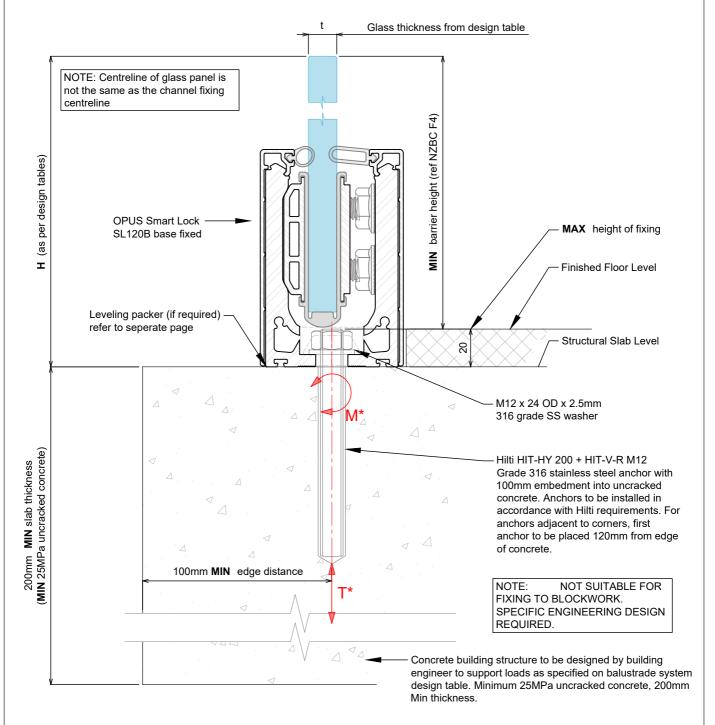

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) No substitution allowed any variation from the details above and design tables will require specific design.
- 4) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM STEEL FIXING DETAIL: SL120B/S/BN

FIXING TYPE: SL120B WITH M10 BOLT & NUT OCCUPANCY: A, B, E, C3, C1/C2, D

NOT SUITABLE FOR OCCUPANCY C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. H' refers to top of barrier.

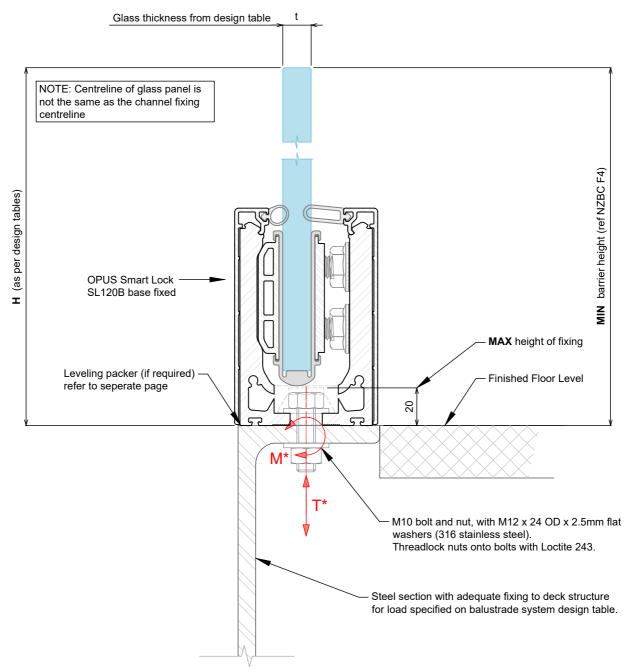

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) For fixing to steel substrates, the installer shall ensure the bolts are tightened to a "snug-tight" level as defined in NZS3404.
- 4) No substitution allowed any variation from the details above and design tables will require specific design.
- 5) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM TIMBER FIXING DETAIL: SL120B/T-SJ/CS

FIXING TYPE: SL120B WITH M10 COACHSCREW OCCUPANCY: A, B, E, C3

NOT SUITABLE FOR OCCUPANCY C1/C2, D OR C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. 'H' refers to top of barrier.

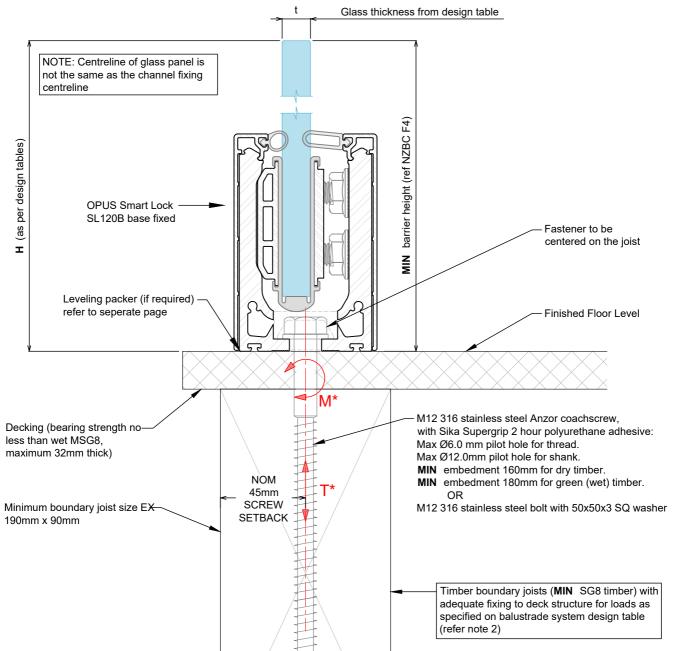

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer where applicable or checked to NZS3604 requirements prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) For fixing to timber substrates, the installer shall ensure that the bolt / coach screw is sufficiently tightened to reduce movement of the bolt head and washer. Care should be taken not to over tighten the fixings that would cause crushing of the timber or compromise the thread leading to anchor pull-out.
- 4) No substitution allowed any variation from the details above and design tables will require specific design.
- 5) Fixings to timber should be periodically checked and re-tightened as necessary to allow for timber shrinkage.
- 6) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM TIMBER FIXING DETAIL: SL120B/T-TJ/CS

FIXING TYPE: SL120B WITH M10 COACHSCREW OCCUPANCY: A, B, E, C3

NOT SUITABLE FOR OCCUPANCY C1/C2, D OR C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. 'H' refers to top of barrier.

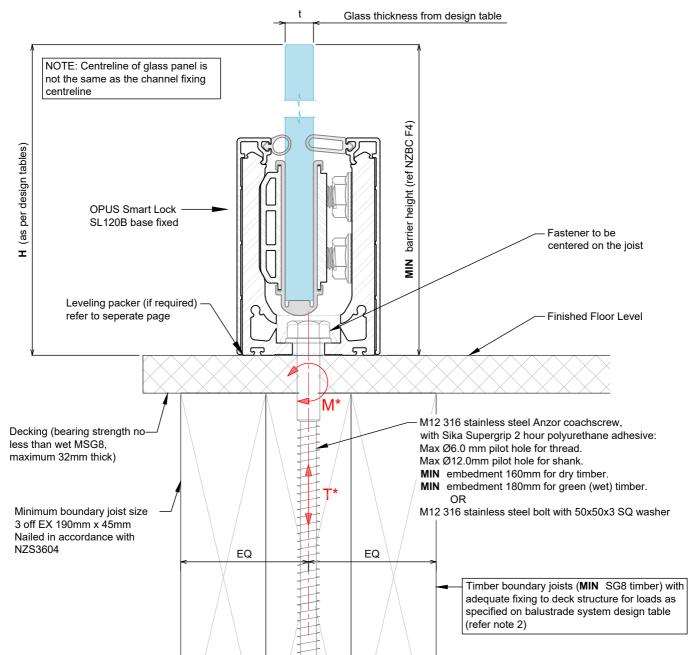

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer where applicable or checked to NZS3604 requirements prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) For fixing to timber substrates, the installer shall ensure that the bolt / coach screw is sufficiently tightened to reduce movement of the bolt head and washer. Care should be taken not to over tighten the fixings that would cause crushing of the timber or compromise the thread leading to anchor pull-out.
- 4) No substitution allowed any variation from the details above and design tables will require specific design.
- 5) Fixings to timber should be periodically checked and re-tightened as necessary to allow for timber shrinkage.
- 6) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM CONCRETE FIXING DETAIL: SL120S/C/RA-M10

FIXING TYPE: SL120S WITH M10 ROD ANCHOR OCCUPANCY: A, B, E, C3, C1/C2, D

NOT SUITABLE FOR OCCUPANCY C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. H' refers to top of barrier.

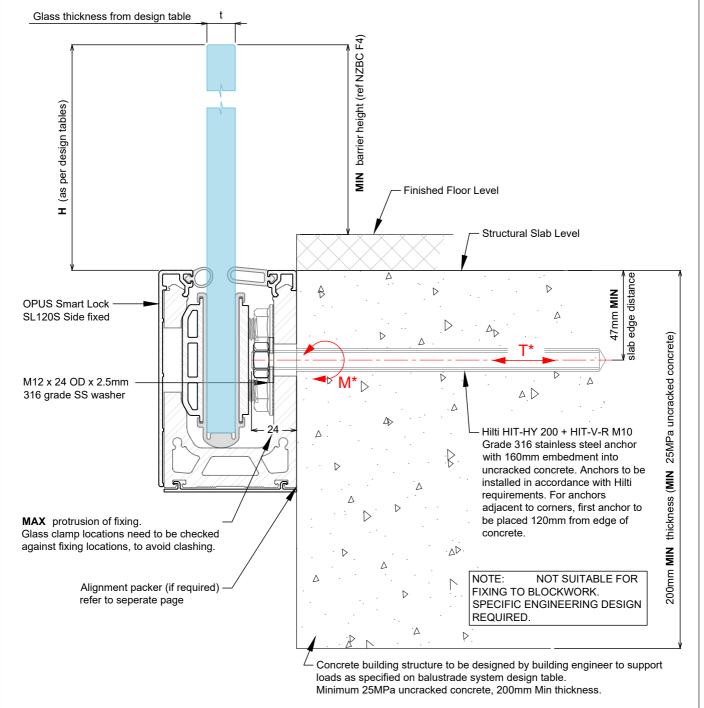

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) No substitution allowed any variation from the details above and design tables will require specific design.
- 4) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM CONCRETE FIXING DETAIL: SL120S/C/RA-M12

FIXING TYPE: SL120S WITH M12 ROD ANCHOR OCCUPANCY: A, B, E, C3, C1/C2, D

NOT SUITABLE FOR OCCUPANCY C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. H' refers to top of barrier.

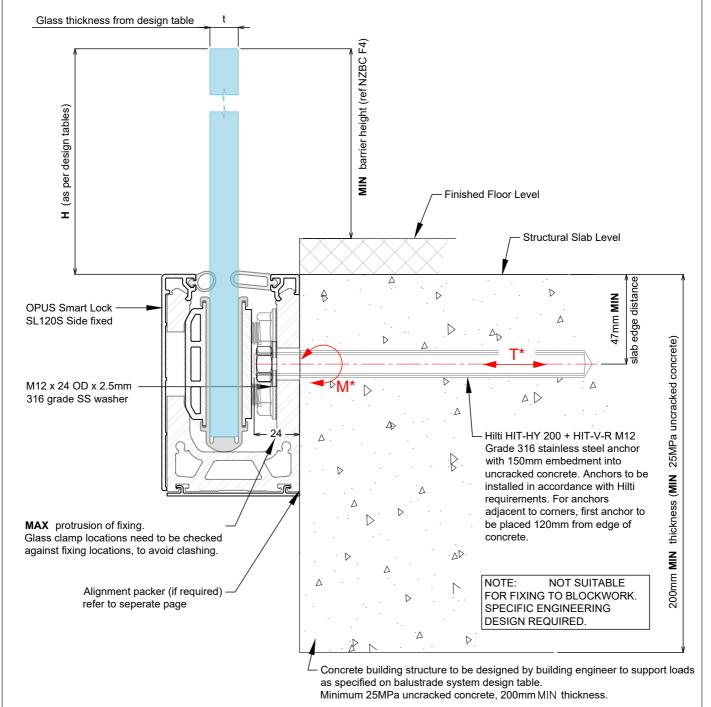

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) No substitution allowed any variation from the details above and design tables will require specific design.
- 4) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM STEEL FIXING DETAIL: SL120S/S/BN

FIXING TYPE: SL120S WITH M10 BOLT & NUT OCCUPANCY: A, B, E, C3, C1/C2, D

NOT SUITABLE FOR OCCUPANCY C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. H' refers to top of barrier.

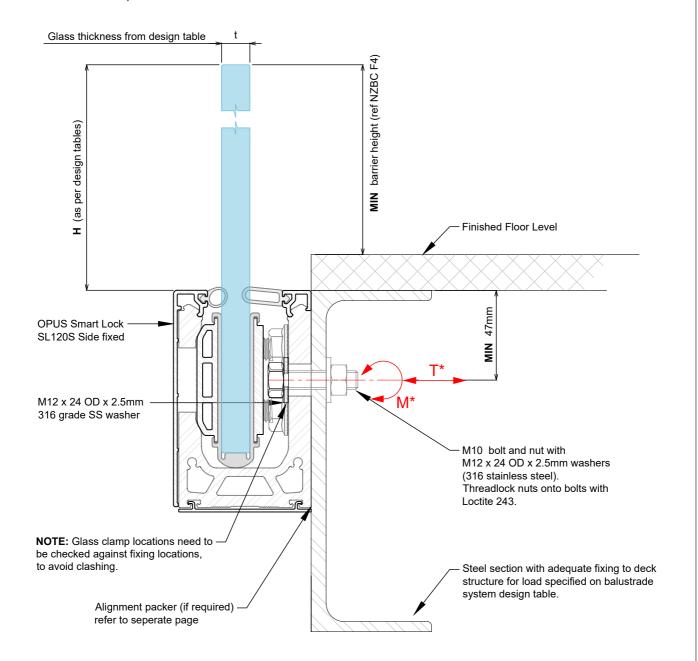

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer prior to fixing balustrade.
- 2) Max loading to comply with AS/NZS 1170.1:2002 minimum imposed actions for barriers occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 3) For fixing to steel substrates, the installer shall ensure the bolts are tightened to a "snug-tight" level as defined in NZS3404.
- 4) No substitution allowed any variation from the details above and design tables will require specific design.
- 5) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM TIMBER FIXING DETAIL: SL120S/T/BN

FIXING TYPE: SL120S WITH M10 BOLT & NUT OCCUPANCY: A, B, E, C3

NOT SUITABLE FOR OCCUPANCY C1/C2, D OR C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.

NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. 'H' refers to top of barrier.

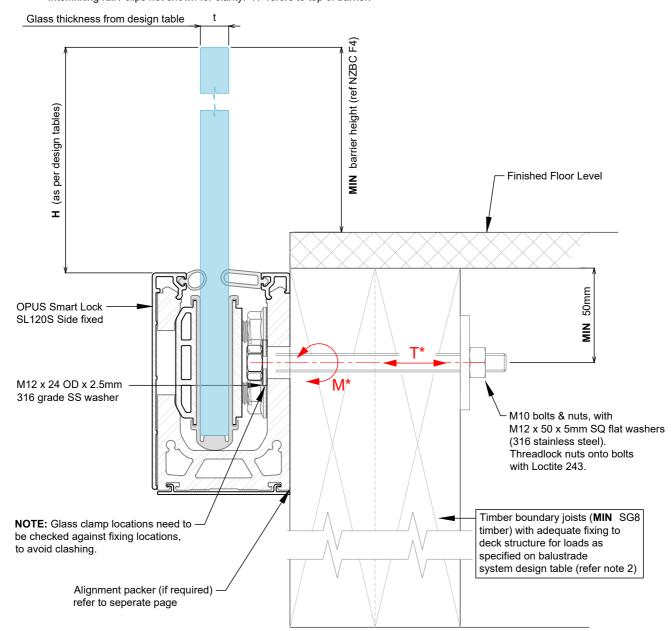

- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer where applicable or checked to NZS3604 requirements prior to fixing balustrade.
- 2) Timber decks designed to NZS 3604:2011 guidelines will meet loading requirement, except for decks including cantilever floor joists where specific design is required.
- 3) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 4) For fixing to timber substrates, the installer shall ensure that the bolt / coach screw is sufficiently tightened to reduce movement of the bolt head and washer. Care should be taken not to over tighten the fixings that would cause crushing of the timber or compromise the thread leading to anchor pull-out.
- 5) No substitution allowed any variation from the details above and design tables will require specific design.
- 6) Fixings to timber must be re-tightened 2 months after installation and periodically thereafter to allow for timber shrinkage.
- 7) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.




SMARTLOCK BALUSTRADE SYSTEM TIMBER FIXING DETAIL: SL120S/T/CS

FIXING TYPE: SL120S WITH M10 COACH SCREW OCCUPANCY: A, B, E, C3

NOT SUITABLE FOR OCCUPANCY C1/C2, D OR C5

Refer to balustrade system design table for required glass thickness, fixing spacings and fixing loads according to AS/NZS 1170.1:2002 for the occupancies listed above.


NOTES: Refer to design tables and elevations for post failure requirements. Interlinking rail / clips not shown for clarity. 'H' refers to top of barrier.

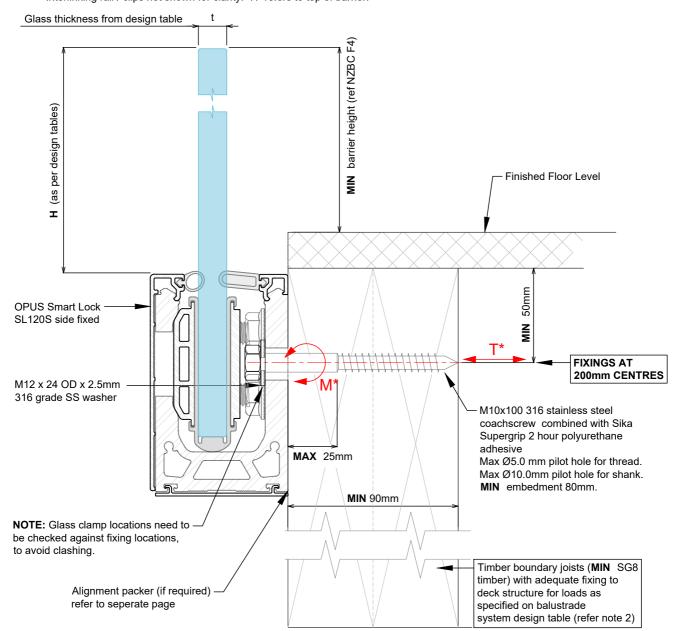


- 1) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer where applicable or checked to NZS3604 requirements prior to fixing balustrade.
- 2) Timber decks designed to NZS 3604:2011 guidelines will meet loading requirement, except for decks including cantilever floor joists where specific design is required.
- 3) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 4) For fixing to timber substrates, the installer shall ensure that the bolt / coach screw is sufficiently tightened to reduce movement of the bolt head and washer. Care should be taken not to over tighten the fixings that would cause crushing of the timber or compromise the thread leading to anchor pull-out.
- 5) No substitution allowed any variation from the details above and design tables will require specific design.
- 6) Fixings to timber must be re-tightened 2 months after installation and periodically thereafter to allow for timber shrinkage.
- 7) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.



SMARTLOCK BALUSTRADE SYSTEM FIXING DETAILS: SL120 PACKER

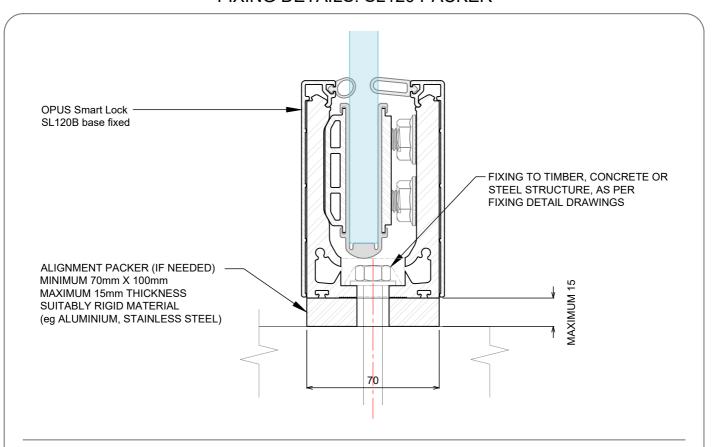

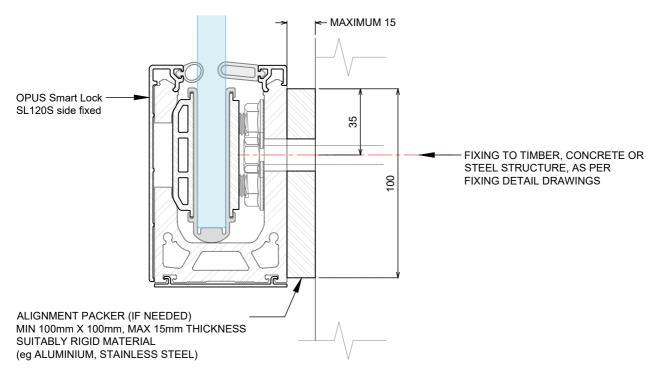

- 1) Refer to individual fixing detail drawings for approved fixings to timber, concrete & steel.
- 2) Capacity of structure is to be of sufficient strength to support loads M* and T* specified on balustrade system design table. Structure capacity to be verified by building engineer where applicable or checked to NZS3604 requirements prior to fixing balustrade.
- 3) Max loading to comply with AS/NZS 1170.1:2002 Minimum Imposed Actions for Barriers Occupancy, shown at top of drawing, for design in accordance with balustrade system design table.
- 4) No substitution allowed any variation from the details above and design tables will require specific design.
- 5) Substructure designer to ensure that there is no water runoff from dissimilar metals or treated timber onto barrier components.



SMARTLOCK ELEVATION (DRAWING 01) LAMINATED SENTRY GLASS

Residential & Commercial SMARTLOCK SYSTEM Occupancy types A, A other, C3, B and E. LAMINATED SENTRY 13.52mm **GLASS & FIXING SPECIFICATIONS:** Refer to design table for maximum glass height, maximum **PANEL WIDTH NOTES:** fixing spacing and design loads to structure. Balustrade stiffener brackets or interlinking rail required for panels <1200mm Minimum panel width where two or more panels are in PANEL WIDTHS < 1200mm REQUIRE BALUSTRADE STIFFENER BRACKETS <u>OR</u> a straight line = 1000mm. Minimum width for short return panel = 200mm. INTERLINKING RAIL (AH4036 or S40) AT REQUIRED BARRIER HEIGHT AS PER B1/AS CL 7.3.1 MINIMUM PANEL WIDTH Panel gap: MIN 14mm 1200mm MAX 20mm REFER TO DESIGN TABLE FOR HEIGHT REQUIREMENTS STIFFENER BRACKET 100 - 200mm FROM TOP FULL HEIGHT SILICONE BUTT 250mm MAX 125mm MAX JOIN REQUIRED AT CORNER clamp spacing overhang at ends Glass stamps

SMARTLOCK SYSTEM LAMINATED SENTRY 17.52mm LAMINATED SENTRY 21.52mm

PANEL WIDTH NOTES:

Balustrade stiffener brackets or interlinking rail required for panels <1000mm.

Minimum panel width where two or more panels are in a straight line = 1000mm.


17.52mm - Residential & Commercial Occupancy types A, A other, C3, B and E.

21.52mm - Commercial Occupancy types C1, C2 and D.

GLASS & FIXING SPECIFICATIONS:


Refer to design table for maximum glass height, maximum fixing spacing and design loads to structure.


FOR OCCUPANCIES A, A OTHER, C3, B & E ONLY: PANEL WIDTHS < 1000mm REQUIRE BALUSTRADE STIFFENER Minimum width for short return panel = 200mm. BRACKETS OR INTERLINKING RAIL (AH4036 or S40). FOR OCCUPANCIES C1. C2 & D: MIN 14mm MAX 20mm 1000mm MINIMUM WIDTH APPLIES. MINIMUM PANEL WIDTH 1000mm REFER TO DESIGN TABLE FOR HEIGHT REQUIREMENTS STIFFENER BRACKET FULL HEIGHT SILICONE BUTT 250mm MAX 125mm **MAX** JOIN REQUIRED AT CORNER Glass stamps clamp spacing overhang at ends





SMARTLOCK ELEVATION (DRAWING 02) TOUGHENED GLASS

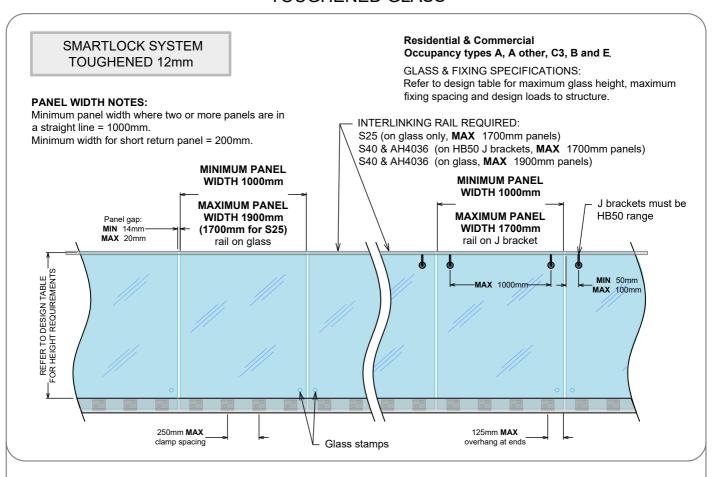

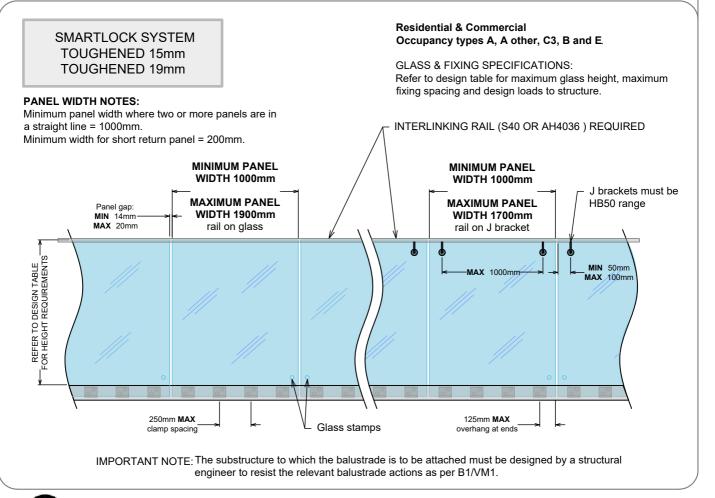




SMARTLOCK ELEVATION (DRAWING 03) POOL FENCE

SMARTLOCK SYSTEM POOL FENCE ONLY (BASE FIX)

GLASS & FIXING SPECIFICATIONS: Refer to design table for maximum glass height, maximum fixing spacing and design loads to structure. APPLIES TO FREE STANDING POOL FENCES NOT PROTECTING A FALL OF > 1000mm.


As of Jan 2017, complies with Building Code Clause F9 & Section 162C of the Building Act.

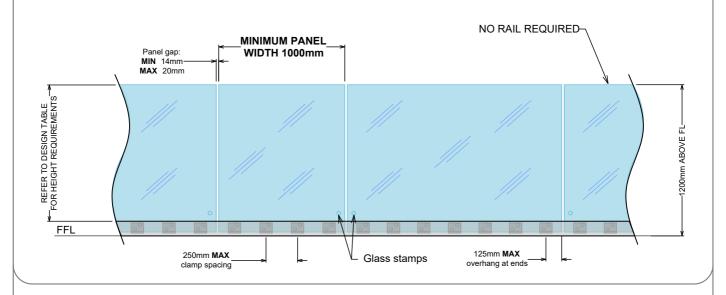

SMARTLOCK SYSTEM POOL FENCE ONLY (SIDE FIX)

GLASS & FIXING SPECIFICATIONS: Refer to design table for maximum glass height, maximum fixing spacing and design loads to structure. APPLIES TO FREE STANDING POOL FENCES NOT PROTECTING A FALL OF $> 1000 \, \mathrm{mm}$.


As of Jan 2017, complies with Building Code Clause F9 & Section 162C of the Building Act.

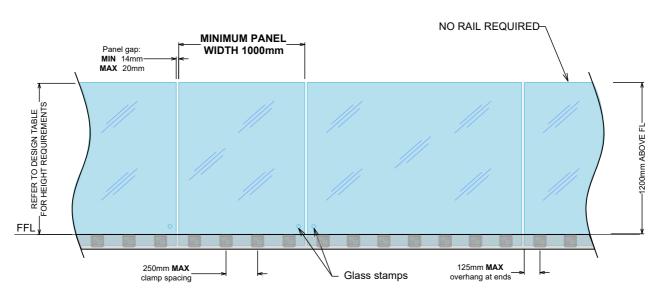

IMPORTANT NOTE: The substructure to which the balustrade is to be attached must be designed by a structural engineer to resist the relevant balustrade actions as per B1/VM1.




SMARTLOCK ELEVATION (DRAWING 04) STAIR BALUSTRADE

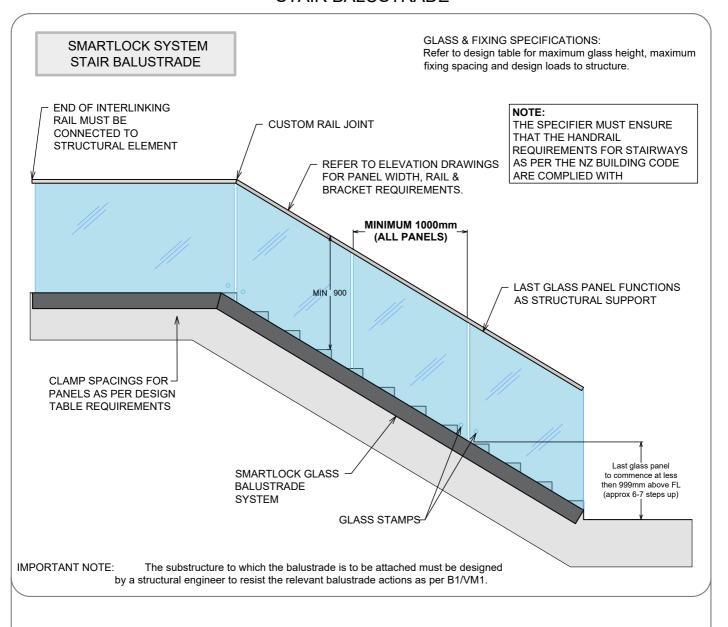




SMARTLOCK BALUSTRADE SYSTEM STIFFENER BRACKETS

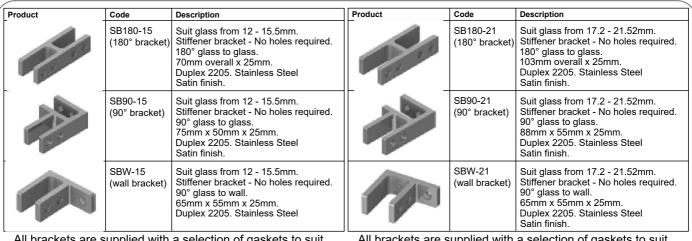


All brackets are supplied with a selection of gaskets to suit glass thickness and includes stainless steel clamping plates.


All brackets are supplied with a selection of gaskets to suit glass thickness and includes stainless steel clamping plates.

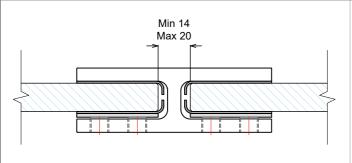


12-15.5mm GLASS - STRAIGHT BRACKET SB180-15

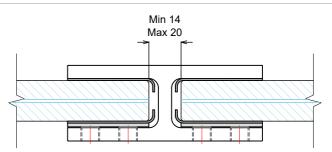


17.2 - 21.52mm GLASS - STRAIGHT BRACKET SB180-21

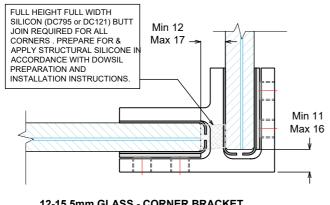


12-15.5mm GLASS - CORNER BRACKET SB90-15

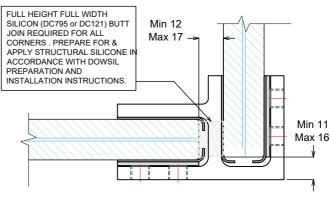


<u>17.2 - 21.52mm GLASS - CORNER BRACKET</u> SC90-21

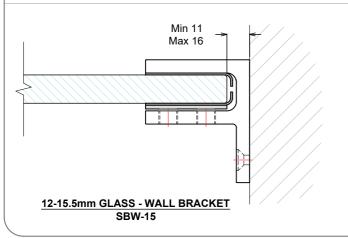

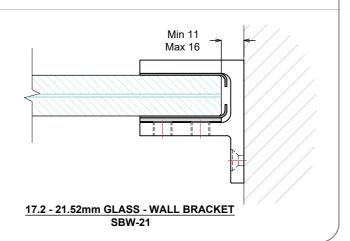



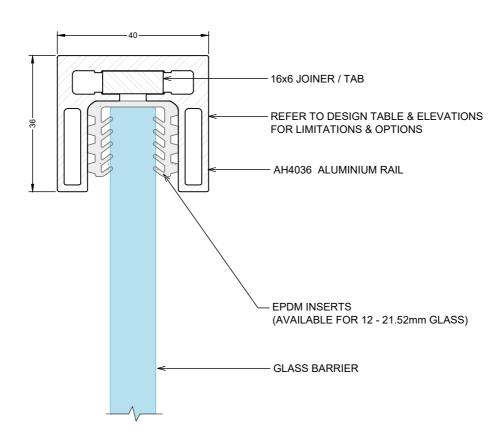


AH4036 RAIL

INSTALLATION NOTES:

- CUT SHORT LENGTHS OF GASKET (nom 50mm) AND PLACE AT APPROXIMATELY 700mm CENTRES.
- 2. CUT / ADJUST INTERLINKING RAIL TO CORRECT DIMENSIONS AND TEST IN POSITION.
- 3. REMOVE ALL PARTS FROM GLASS BARRIER AND INSTALL FULL CUT LENGTHS OF GASKET TO TOP EDGE OF GLASS BARRIER.
- 4. ASSEMBLE TOP RAIL, JOINERS AND SUITABLE END PLATES.
- 5. PLACE BLOBS OF V60 SILICONE IN EVERY GASKET HOLE.
- 6. PLACE TOP RAIL EXTRUSION, JOINERS AND END PLATES IN POSITION ON GLASS BARRIER, CLIPPING FIRMLY TO GASKET.
- TAPE ASSEMBLED COMPONENTS DOWN TO GLASS BARRIER AND WAIT 24hrs TO FULLY BOND.
- CLEAN UP ANY EXCESS SILICONE.

NOTE: RAIL ENDS MUST BE ATTACHED TO STRUCTURE OR STRUCTURAL POST. EXTRUSION JOINS MUST HAVE A SUITABLE JOINER PLATE



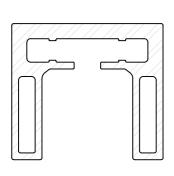

AH4036 **ALUMINIUM RAIL**



END CAP

AH4036ECBBA (Brushed Black Anodized)

AH4036ECBSA

(Brushed Silver Anodized)



WALL BRACKET

AH4036WBTBBA

(Brushed Black Anodized)

AH4036WBTBSA

(Brushed Silver Anadized)




MH4030R12 FOR 12 - 12.76mm GLASS



MH4030R1315 FOR 13 - 15mm GLASS



MH4030R1517 FOR 15 - 17.52mm GLASS



MH4030R19 FOR 19mm GLASS



MH4030R2021 FOR 20.76 - 21.52mm **GLASS**



180° joiner



90° joiner




Joiners all 16 x 6mm



AHR42CAC Adjustable horizontal joiner



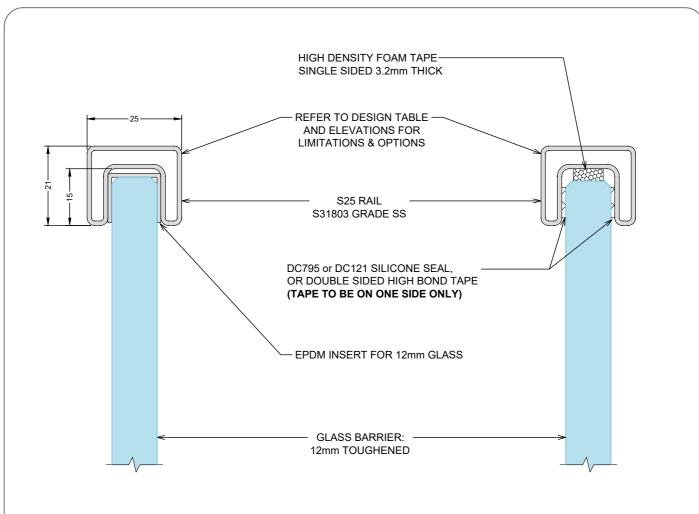


EPDM GASKET SYSTEM

TAPE & SILICONE SYSTEM

<u>\$25-01</u> \$25 RAIL - TYPICAL INSTALLATIONS

- 1. PREPARE FOR AND APPLY DC795 & DC121 STRUCTURAL SILICONE IN ACCORDANCE WITH DOWSIL PREPARATION AND INSTALLATION INSTRUCTIONS.
- 2. INTERLINKING RAIL SPLICE & CORNER CONNECTIONS ARE SHOWN ON DRAWINGS S25-02 & S25-03
- INTERLINKING RAIL END CONNECTION BRACKETS & ATTACHMENT DETAILS ARE SHOWN ON DRAWINGS \$25-04 to \$25-08.
- ALL SCREWS TO BE STAINLESS STEEL WITH A MINIMUM ULTIMATE SHEAR STRENGTH OF 3.5kN (PER SCREW).
- LINK RAIL SECTION AND CONNECTION PIECES TO BE S31803 GRADE STAINLESS STEEL, IN ACCORDANCE WITH NZS 4673:2001.
- 6. REFER TO WARRANTY & MAINTENANCE PAGES FOR PERIODIC INSPECTION, CLEANING & MAINTENANCE REQUIREMENTS.




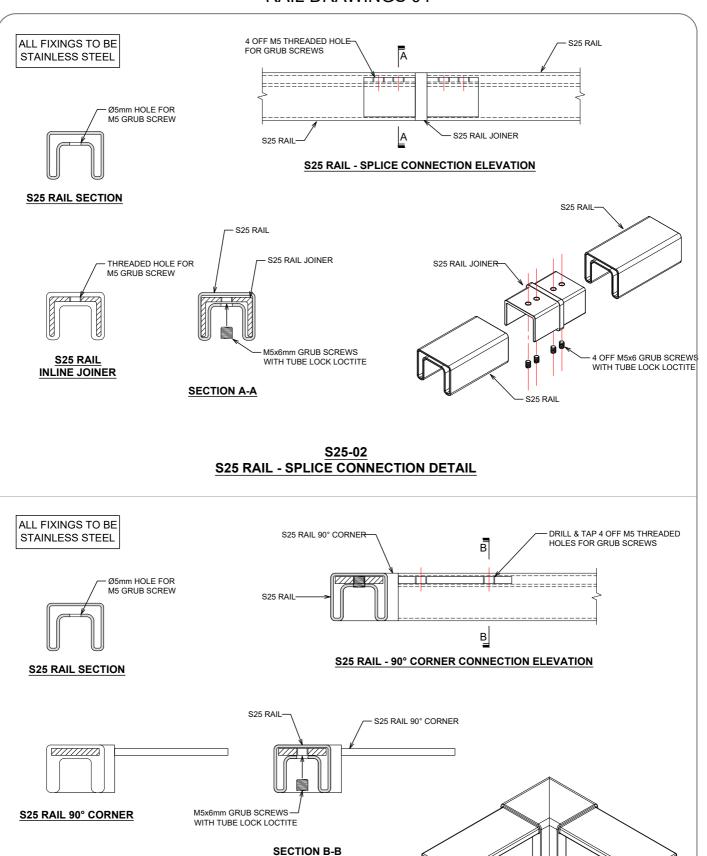




\$25-03 \$25 RAIL - 90° CORNER CONNECTION DETAIL


S25 RAIL FIXED 90° CORNER

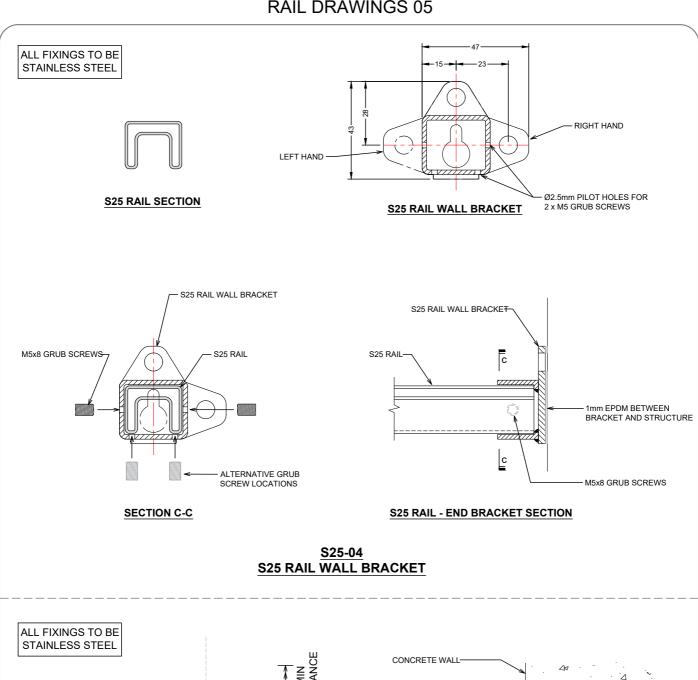

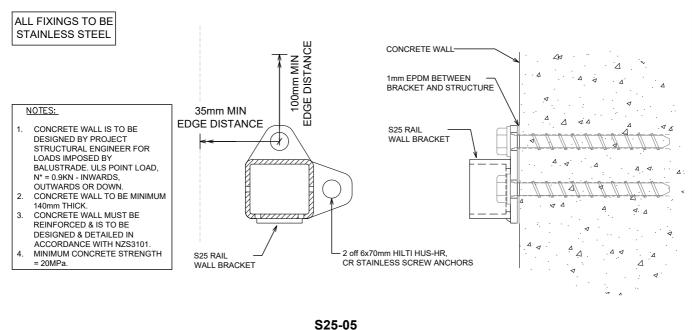




S25 RAIL - END BRACKET CONCRETE WALL ATTACHMENT

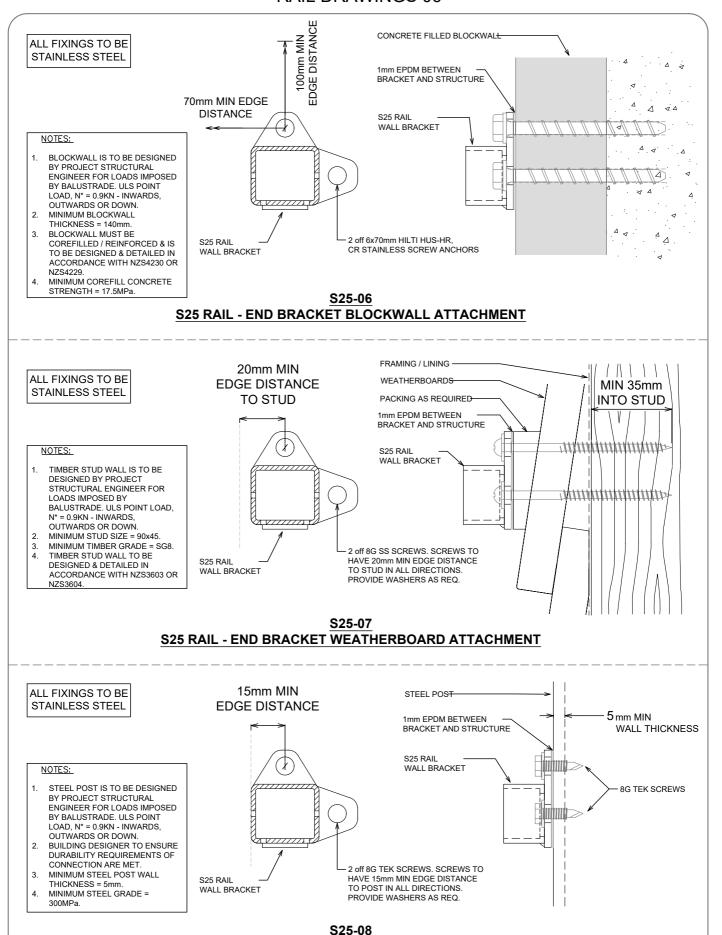




S25 RAIL - END BRACKET STEEL POST ATTACHMENT

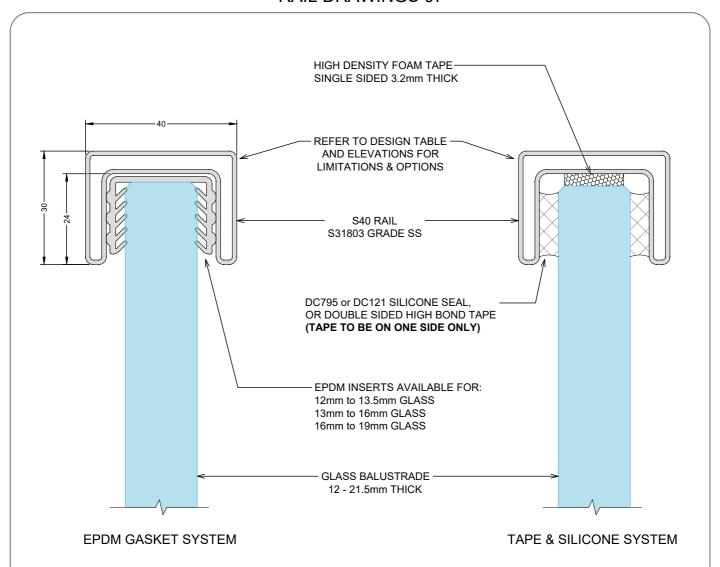


\$40-01 S40 RAIL - TYPICAL INSTALLATIONS

- 1. PREPARE FOR AND APPLY DC795 & DC121 STRUCTURAL SILICONE IN ACCORDANCE WITH DOWSIL PREPARATION AND INSTALLATION INSTRUCTIONS.
- INTERLINKING RAIL SPLICE & CORNER CONNECTIONS ARE SHOWN ON DRAWINGS S40-02 & S40-03
- INTERLINKING RAIL END CONNECTION BRACKETS & ATTACHMENT DETAILS ARE SHOWN ON DRAWINGS \$40-04 to \$40-08.
- ALL SCREWS TO BE STAINLESS STEEL WITH A MINIMUM ULTIMATE SHEAR STRENGTH OF 3.5kN (PER SCREW).
- 5. LINK RAIL SECTION AND CONNECTION PIECES TO BE S31803 GRADE STAINLESS STEEL, IN ACCORDANCE WITH NZS 4673:2001.
- 6. REFER TO WARRANTY & MAINTENANCE PAGES FOR PERIODIC INSPECTION, CLEANING & MAINTENANCE REQUIREMENTS.




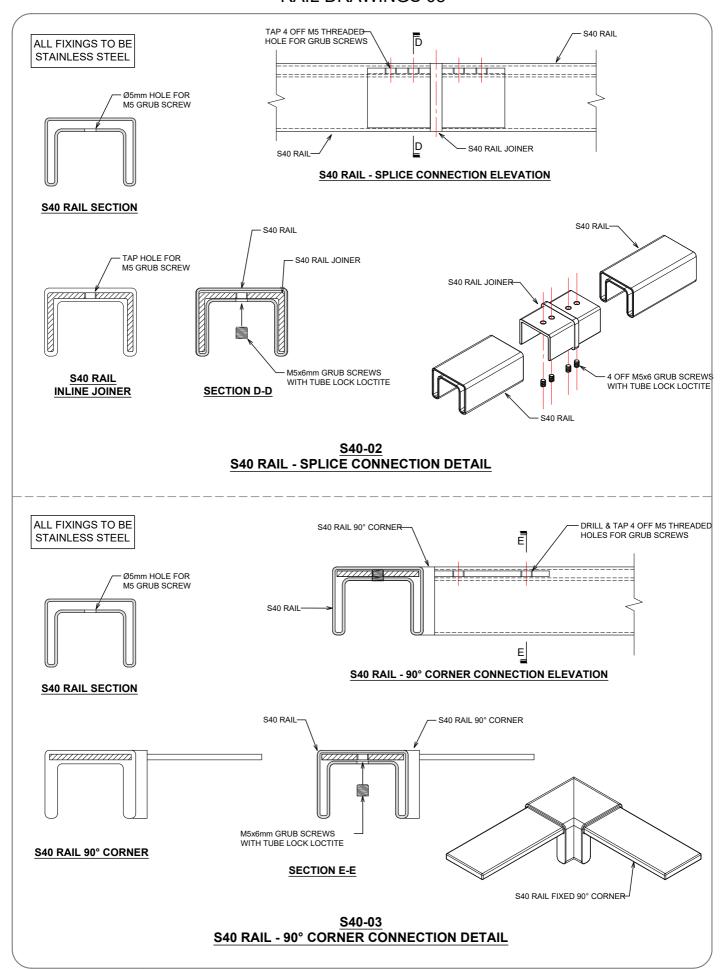



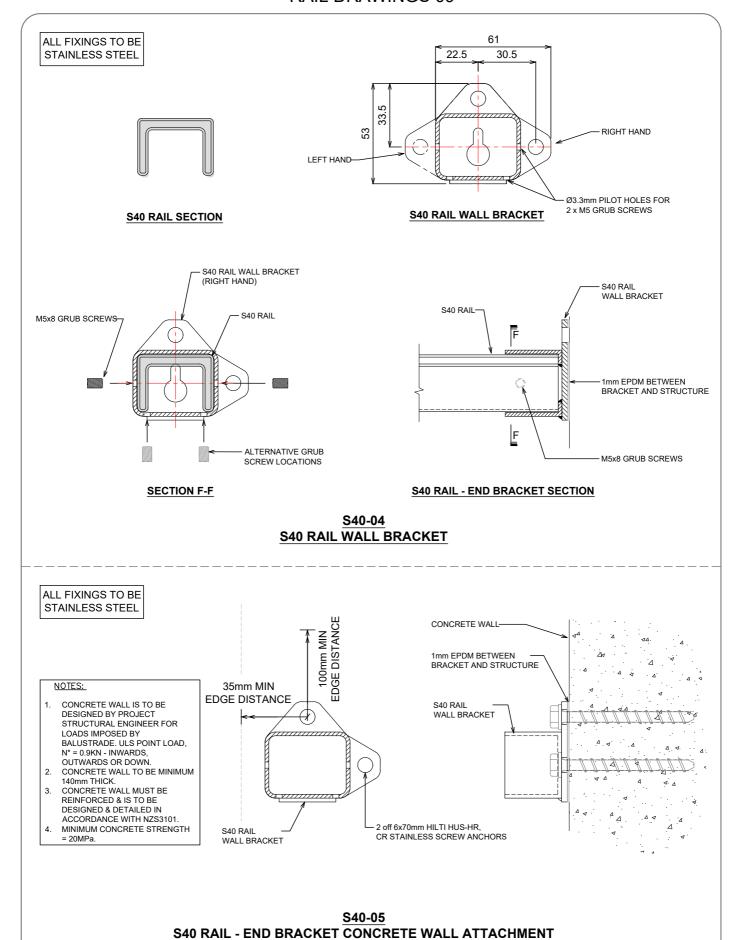




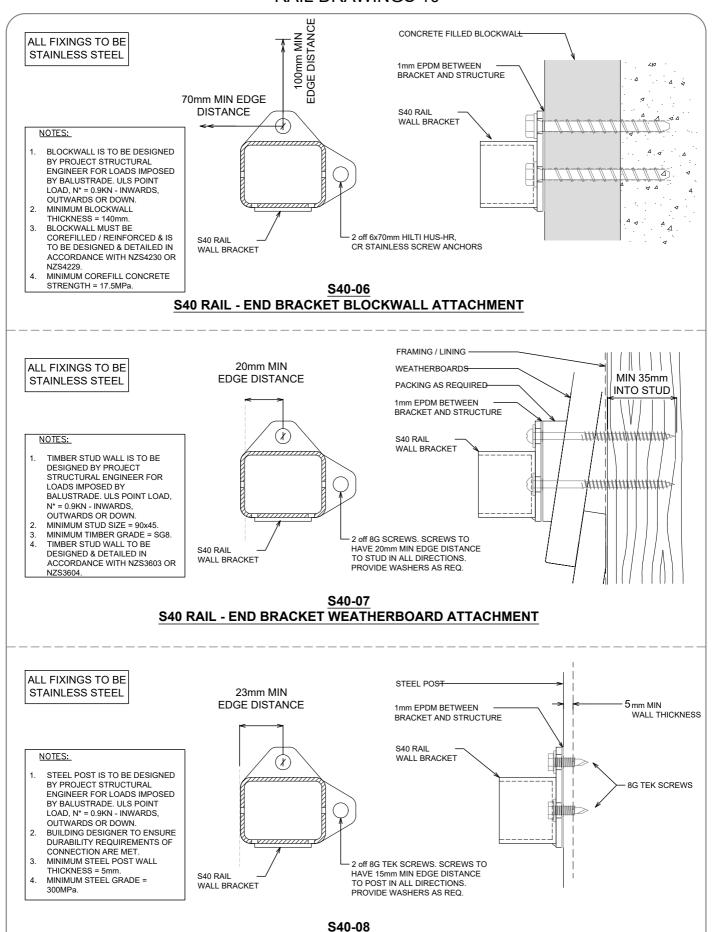




S40 RAIL - END BRACKET STEEL POST ATTACHMENT

SMARTLOCK BALUSTRADE SYSTEM HB50 RAIL BRACKETS

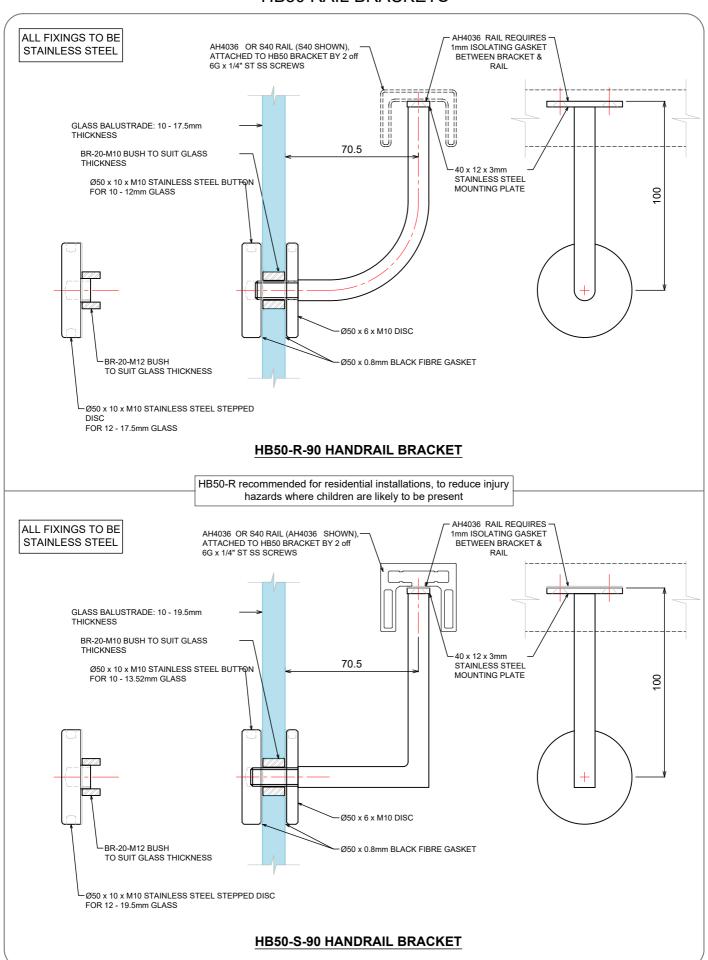



SMARTLOCK BALUSTRADE SYSTEM RAIL CONNECTIONS TO END POST

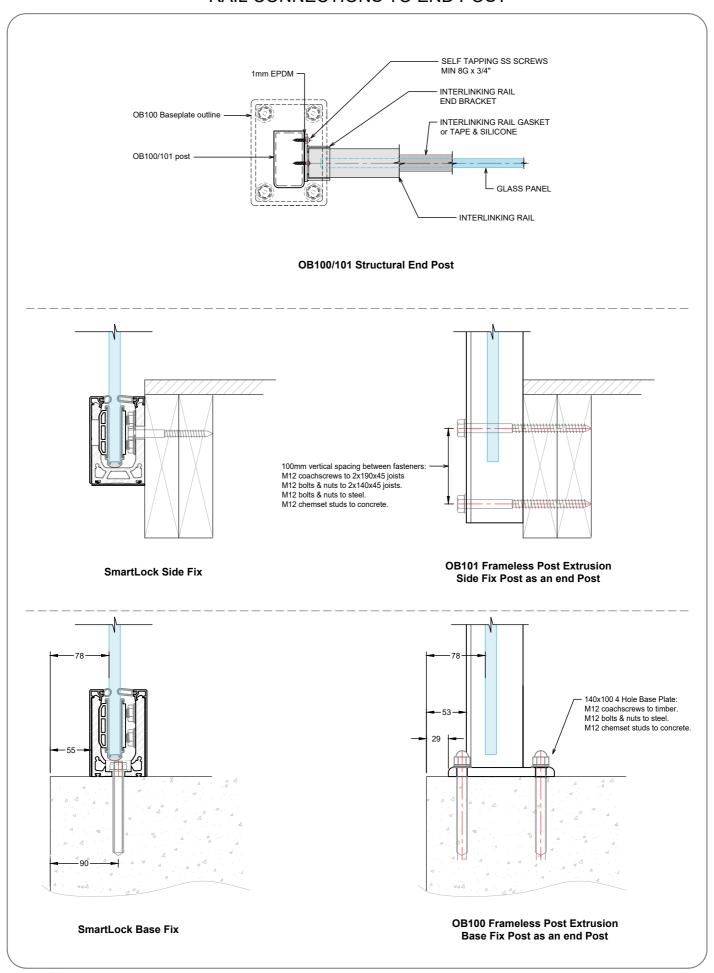



CARE AND MAINTENANCE OF BALUSTRADE GLASS & HARDWARE

Hardware requires regular maintenance to ensure the system performs at its best. As a general rule, the harsher the environment, the more regular the maintenance required to keep your hardware in top condition. Also hardware or systems that are covered by verandas or wide eaves and not subject to natural rain wash needs regular cleaning to avoid damage to surface finish on both the aluminium and any surface coated hardware.

Fair wear and tear;

- **Seals and rubbers** will require replacing from time to time depending on the environment. As a general rule, they should last for 10 years or more, and can be replaced by service provider.
- Tracks, rollers (if accessible) and hardware require lubrication; rollers may require replacing due to normal wear and tear. This
 depends on the environment and amount of use.

CARE AND MAINTENANCE, WASHING GLASS

Regular washing and drying of glass windows and doors are required to ensure their long term durability. In urban areas washing should be done every three to six months. The following guidelines apply:

- a. When washing, soak the glass surface with warm water and a mild soap detergent solution or proprietary glass cleaners to loosen dirt and debris.
- b. Use a soft grit free cloth or sponge when washing and try to avoid washing In direct sunlight. Do not use scrapers or razor blades.
- c. After washing, rinse with clean water and then dry the glass using a clean, grit-free squeegee, cloth, or paper towel. Remember, wet glass is dirty glass.
- d. All water and cleaning solution residue should be dried from the window gaskets, sealants, and frames to prevent water spots.
- e. Avoid cleaning tinted and reflective glass surfaces in direct sunlight. When washing special glass, the following guidelines apply:
- f. When washing double glazing and laminated glass, use the same procedures as above but ensure no solvents come into contact with the edge laminate interlayer or unit sealant.
- g. With reflective or Low E coated surfaces, exercise special care when cleaning special cleaners may be required as they can be hard to clean. Follow manufacturer's instructions.
- h. It is advisable to check that frame drainage is not blocked this can affect laminate and insulated glass units.

DO NOT:

- Do Not Use Scrapers of any type or size on a Glass surface.
- Do Not Leave building dirt or residues to remain on Glass for a period of time.
- Do Not Begin cleaning glass until you have identified the surface type.
- Do Not Clean Glass surfaces in direct sunlight.
- Do Not Allow dirty water or cleaning residues to remain on the Glass.
- Do Not Begin cleaning before rinsing off loose residues.
- Do Not Use abrasive cleaning solutions, materials or solvents.
- Do Not Allow metal parts of the cleaning equipment to come in contact with the Glass.
- Do Not Trap abrasive particles between the cleaning material and the Glass.

DO:

- Clean glass promptly when dirt or building residues appear.
- Determine glass surface type.
- Exercise special care when cleaning coated surfaces.
- Avoid cleaning glass surfaces in direct sunlight.
- Start cleaning at the top of a building, then continue to lower levels.
- Soak the glass surface in a clean soapy solution before cleaning.
- Use a mild non abrasive commercial cleaner.
- Use a squeege to remove all cleaning solution.
- Try your procedures on a small window and check.



CARE AND MAINTENANCE OF POWDERCOATING

Powder coating is available in a wide range of colours with commercially available surface integrity warranties from 10 to 30 years. The powder coating surface warranty period is conditional upon the formulation and micron thickness. Over time with exposure to the elements, powder coatings may show signs of weathering such as loss of gloss, chalking and slight color change. A simple regular clean will minimise the effects of weathering and will remove dirt, grime and other build-up detrimental to all powder coatings.

The frequency of such cleaning will depend on many factors including the:

- Geographical location of the building.
- Environment surrounding the building e.g. marine, industrial, alkaline or acidic, etc.
- Levels of atmospheric pollution including salts.
- Prevailing winds and the possibility of air borne debris causing erosive wear of the coating e.g. sand causing abrasion.
- Protection of part or all of the building by other buildings.
- Change in environmental circumstances during the lifetime of the building e.g. if rural became industrial.

The following guidelines apply:

- a. Just a gentle clean with a soft brush and mild detergent, followed by a fresh water rinse, will maintain the long-term performance of the powder coated or anodised aluminium. In rural or normal urban environments cleaning should occur every six months. In areas of high pollution, such as industrial areas, geothermal areas or coastal environments, cleaning should occur every three months. In particularly hazardous locations, such as beachfronts, severe marine environments or areas of high industrial pollution, cleaning should be increased to monthly.
- b. Sheltered areas can be at more risk of coating degradation than exposed areas. This is because wind-blown salt and other pollutants may adhere to the surface. These areas should be inspected and cleaned if necessary on a more regular basis.
- c. Adequate on site protection of delivered and/or installed hardware must be provided. Hardware may get knocked, scratched, or splattered with mortar, plaster, or paint during the later stages of construction. If splashes occur immediately wash down the hardware unit affected with water or methylated spirits* (*wash area thoroughly afterwards). Do not allow splashes to harden.
- d. To restore powder coated surfaces that have lost gloss or are chalking, polishing with a high quality crème polish in accordance with the manufacturer's instructions is recommended. Avoid polishes that contain cutting compounds, unless the surface is extremely weathered.

DO NOT USE SOLVENTS Strong solvent type cleaners should not be used. These are harmful to the extended life of your hardware system.

CARE AND MAINTENANCE OF ANODISING

Anodised hardware is not only attractive, but also offers a durable and tough wearing finish. Some deterioration of the anodic oxide coating may occur, mainly as a result of grime deposition and subsequent attack by moisture, particularly if the moisture is contaminated with sulphur compounds.

Regular cleaning is essential to preserve the finish of anodised aluminium over a long period. The following guidelines apply:

- e. Anodised aluminium should be washed with warm water and a suitable wetting agent or mild soap solution, in a similar manner to washing a car. A fine brush may be used to loosen dirt or grime. The use of anything stiffer or more abrasive may result in damage to the surface. Acid or alkali cleaners should not be used, as these will damage anodic films and may discolour coloured hardware.
- f. Where greasy deposits or hard to remove grime is present, the anodising may be cleaned with a soft cloth dipped in white spirit, turpentine, kerosene, or a mild liquid scourer, followed by wiping it with a dry rag. However, the cleaner must ensure none of these solvents come into contact with other parts of the system. All solvents must be kept from contact with the Santoprene glazing gasket materials (the "rubber" seal around the glass), as most solvents will damage them.
- g. It is essential to rinse anodised aluminium thoroughly with copious applications of clean water after cleaning, particularly where crevices are present, and then dry the glass to prevent water spots.

Regularly washing anodised hardware will ensure a long lasting product. In general, the following programme is recommended:

- Rural environments: every six months.
- Urban environments: every three months.
- Industrial and marine environments: every six months, as well as a monthly cold water wash.

For additional protection, especially in harsh environments, waxing with a good quality car wax after washing will assist in lifting and maintaining the appearance of your anodised hardware.

Damage to anodised surfaces may occur during building. Painters may accidentally splash paint on newly installed hardware, marring their appearance. The cleaner must act quickly and remove such splashes with a soft cloth moistened with water. Using water based paints allows the cleaner to clean with water - using solvents may put your hardware at risk.



CARE AND MAINTENANCE OF STAINLESS STEEL

Stainless steel is used for fittings and hardware for its strength, aesthetics, and its inherent high level of corrosion resistance. 2205 & 316 Grade Stainless Steel (also known as Marine Grade stainless) hardware is predominately used for external applications such as balustrades, pool fences, canopies and spider walls, but many of the entry door patch fittings and handles use 304 Grade. The design of our frameless glass systems and installation techniques are intended to make the systems as maintenance free as possible, but there are still maintenance procedures, associated with any exposed structure, that must not be overlooked. Stainless Steel is called so as it is less prone to staining - it is important to recognize that the material is not impervious to mild staining or even corrosion in some instances. The likelihood and severity of staining is a product of exposure to marine salts and other corrosive materials which can affect installations even 20km inbound from coastal areas. Pollen and other airborne matter can also contribute to corrosion so there no areas of New Zealand where the topic can be ignored. The smoother the surface is, the less prone to discoloration.

Stainless steel may be discoloured from corrosion;

- If used in areas where rain does not wash the fittings.
- If it is exposed to a more aggressive environment than that for which the particular grade of steel is intended, e.g. highly polluted air, salt solutions or residues of cleaning agents containing chlorine.
- If it has a rough surface that enables a corrosive substance to adhere to.
- If the fittings are not cleaned after installation and have oil/acid from hands.
- If the design of the steel component has crevices and narrow gaps.
- If the surface is contaminated or damaged by grinding swarf or other iron particles from tools used in the installation work.
- If fasteners of ordinary steel or dissimilar metals are used for securing the hardware, or if the hardware comes into direct contact with adjacent components made of plain carbon steel in wet or humid conditions (galvanic corrosion).

Light corrosion is often referred to as "Tea Staining" as it is a brown surface discolouration which, although not affecting the material structurally, is none the less unsightly. The likelihood of this occurring can be greatly reduced through the use of 2205 or 316 Grade, regular cleaning and the use of protective coatings.

The following guidelines apply;

- a. Any stainless steel hardware should be cleaned after installation and before any glass is installed.
- b. Basic cleaning can be carried out using simple soap solutions or mild detergents applied with warm water (or proprietary cleaners) and a clean non-abrasive cloth. The solution should be thoroughly rinsed off with cold water, and wiped dry with a clean absorbent cloth. Isopropyl alcohol can also be used to clean finger and hand marks.
- c. Avoid bleach, as this can mark the metal surface, and avoid any abrasive applicators especially a ferrous based cleaning pad, such as steel wool, as this can introduce contamination which reacts with the stainless steel and makes corrosion worse.
- d. Protective coatings are also available that can be easily applied to the hardware which can increase maintenance periods. Information regarding these products is available from OPUS. Stainless steel hardware should be cleaned again during the final clean and if possible after any surrounding building work is complete.
- e. If mild tea staining has already occurred, a plastic abrasive pad "Scotchbrite" for example can be used, again with warm water and a mild detergent / soap solution. When abrading however, it is important to only rub in one direction which is the same direction as any visible brushed finish. Take care to only rub the steel components, not the glass. A stainless steel rejuvenating paste can also be used and works well in combination with a scotchbrite pad. Information regarding these products is available from ORUS
- f. When installation is complete the frequency of a regular cleaning regime will vary according to the installation design and level of exposure, especially in regard to proximity to the sea. In general cleaning should take place 3 to 4 times a year. Protective coatings can prolong the maintenance interval.

In summary:

- Cleaning should be thorough and at a frequency to suit the environment
- Wash with warm water and mild detergent or soap solution or use proprietary stainless steel cleaners.
- Rinse thoroughly with clean cold water and dry.
- Do not use harsh abrasive cleaners and especially no wire wool or similar ferrous scourers.
- If mild corrosion is present, then a mild abrasive detergent or rejuvenating paste can be used with a warm mild solution and fully rinsed with clean cold water.
- Heavier levels of staining can be removed with a light plastic abrading pad (such as Scotchbrite) rubbing must only be in one direction with that being as per any visible surface finish. This is best done with a rejuvenating paste □ Use protective coatings after cleaning

Be careful to ensure cleaners do not effect fibre or other fitting gasket materials



CARE AND MAINTENANCE OF HANDLES / MECHANISMS

Periodic maintenance of handles / mechanisms is essential, this includes locks, handles, hinges, levers, rollers, bolts, etc. This applies particularly to mechanisms with moving parts that require lubrication. Before doing any cleaning or maintenance, you must establish exactly what hardware has been installed and how it has been constructed.

Lubrication for Mechanisms;

Mechanisms include hinges, cylinders, locks, rollers and fasteners. You can keep these mechanisms in good working order through regular cleaning and lubrication.

• OPUS recommend a Teflon-based lubricate or please refer to the manufacturer's care instructions. A soft bristle brush can be used on exposed parts. Apply Teflon-based lubricate to the moving parts - you don't need to use very much. This will limit corrosion of the exposed metals. OPUS advise to do this once every two months. If, however your hardware is near the sea or exposed to salt air, we recommend you lubricate the components once every month.

Electrical Entrance Systems;

- Do not let the product get wet.
- Keep clear of debris and general dirt.
- Wipe the keypads or swipe the device with a clean damp cloth.
- Do NOT use solvents.
- · Replacement batteries will be required.

SCRATCHES AND METAL SCRAPERS

Scratches can occur from hard pointed objects or poor handling, but most often occurs from the careless removal of foreign matter from the glass surface. Mortar splatter and paint are common offenders and efforts to remove after hardening almost always lead to surface damage.

- It is essential that the foreign materials are removed before they harden. Better still, if construction work continues after glazing, that the glazed areas are protected by adhesive plastic films or suitable covers.
- One of the common mistakes made by non-glass trades people, including glass cleaning contractors, is the use of razor blades or
 other metal scrapers on a large portion of the glass surface. Using large blades to scrape a window clean carries considerable risk
 of causing damage to the glass.
- The glass industry, fabricators, distributors and installers neither condones nor recommends any scraping of glass surfaces with metal blades or knives. Such scraping usually permanently damages or scratches the glass surfaces.
- When paint or other construction materials cannot be removed with normal cleaning procedures, a new 25mm razor blade may have to be used. The razor blade should be used on small spots only. Cleaning should be done in one direction only. Never scrape in a back and forth motion as this could trap particles under the blade that could scratch the glass. Blades or scrapers can dislodge "pickup" on toughened and heat strengthened glass. There are fine particles of glass that are fused on to the surface during toughening. Once dislodged they can scratch the glass.

ONSITE CONSTRUCTION / INSTALLATION PROTECTION

Hardware Protection during Installation:

- All the activity on a construction site means that your hardware items may get knocked or scratched, splattered with mortar, plaster, textured coating or paint during the later stages of construction.
- Please ensure that all hardware articles are masked or covered at this time. It is far easier to prevent accidents than to try and
 correct them. Should your hardware receive mortar or paint splashes see that these are removed before cure and follow the
 instructions outlined above.

For further information, please refer to the PS1 or OPUS instructions and guidelines on our website.

